


Points to keep in mind regarding the general operation method of AJATERM

1. Data entry

When entering data with a control that looks like the one below, you can directly enter a value by clicking the text part (or the “...” button) in addition to the slider and spin button.

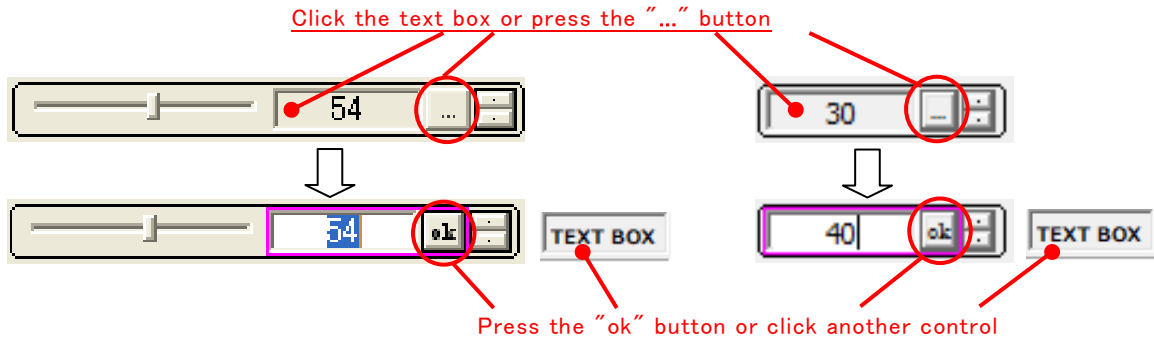


Enter a value here and press the “ok” button or click another control (button, text box, etc.) to set the entered value. When entering a hexadecimal number, add “0x” at the beginning.

2. Tooltip

When you place the cursor on various buttons or text boxes, the tool chip is displayed and disappears after a certain period of time. However, this application not only displays the tool chip but also has the following functions.

•Continue to display tool chips

Move the mouse cursor over the tool chip to continue displaying the tool chip.

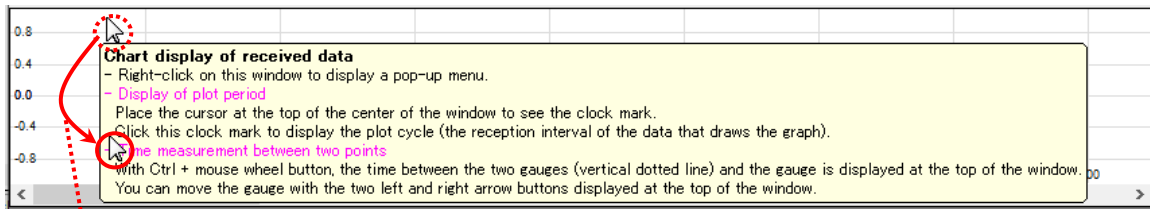


If you move the mouse cursor quickly over the tool chip, the tool chip will continue to be displayed. Then move the mouse cursor out of the tooltip and the tooltip will disappear.

•Copy tool tip

Right-click on the tool chip to display the “Copy” button.

Press the Copy button to copy the tooltip text to the clipboard.

If you hold down the SHIFT key and press the “Copy” button, the tooltip image will be copied.

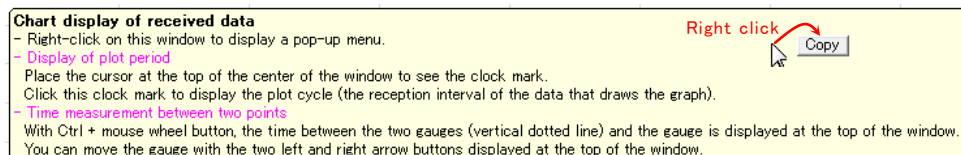

•Hide tool chips

Click on the tool chip to make it disappear.

If the “Copy” button is displayed, the “Copy” button disappears.



3. Modal dialog box and modeless dialog box

A modal dialog box is a type of dialog in which you cannot perform other operations without closing the dialog box.

In this type of dialog, the "OK" button is displayed, and the setting contents are saved by pressing the "OK" button, and the setting contents are not saved by pressing the "Cancel" button or the "X (Close)".


A modeless dialog box is a dialog that allows you to perform other operations at the same time as the dialog.

The "OK" button is not displayed in the modeless dialog. If you press the "X" button on the upper right of the window, the settings will be saved, and if you press the "Cancel" button, the settings will not be saved.

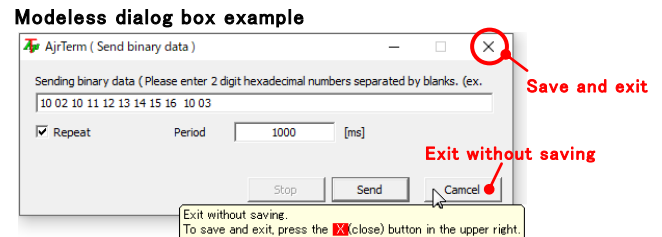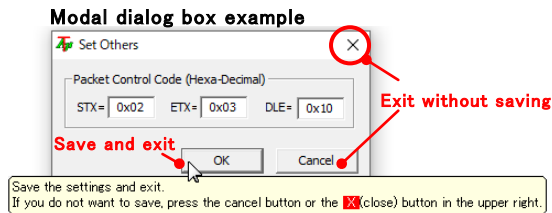

Please note that the behavior of the modal dialog box and the modeless dialog box is different when the window is closed with the "X" button on the upper right of the window.

4. Screen clear button

When you place the cursor on the upper part of the center of the log window, the screen clear button "  " will be displayed. Click this button to clear the screen.

